



LIBRARY GROUP · DISPLAY GROUP · CUSTOM MILLWORK GROUP

Assembly Instructions Mobile Shelving


Refer to attached drawing

Note: Finger tighten all bolts until assembly is complete.

- 1) Bolt one metal frame and one "L" bracket to end wall using four bronze trim bolts. Be sure the hole cluster in the frame rail corners faces outward.
- 2) If installing an adder, bolt adder wall to both metal frames using 1 3/4" bolts with washers and nuts. Otherwise, repeat step one for second end wall.
- 3) Mount casters. For ends, bolt caster plate to end panels using 3/4" hex bolts into threaded inserts. Bolt same plate through metal frame using 3/4" hex bolts with washer and nut.

For intermediate panel on adder, center large flat plate over end of panel. Locate caster plate so that holes line up with holes in flat plate and metal frames. Secure with 3/4" hex bolts, washers and nuts. Note: the intermediate caster plates will be oriented 90 degrees from those of the end panels.

- 4) Slide backs into groove with notches facing downward. Secure back to bottom frame through two holes, using small 1" bolts.
- 5) Install top filler using 1 3/4" bolt and washer for end panel and 3 3/4" bolt with washers and nut for intermediate panel.
- 6) Tighten all bolts and stand unit on its wheels.
- 7) Each unit will have two decks where the pin notch is deeper than that of the shelves. This allows the deck to sit on top of the base rail.

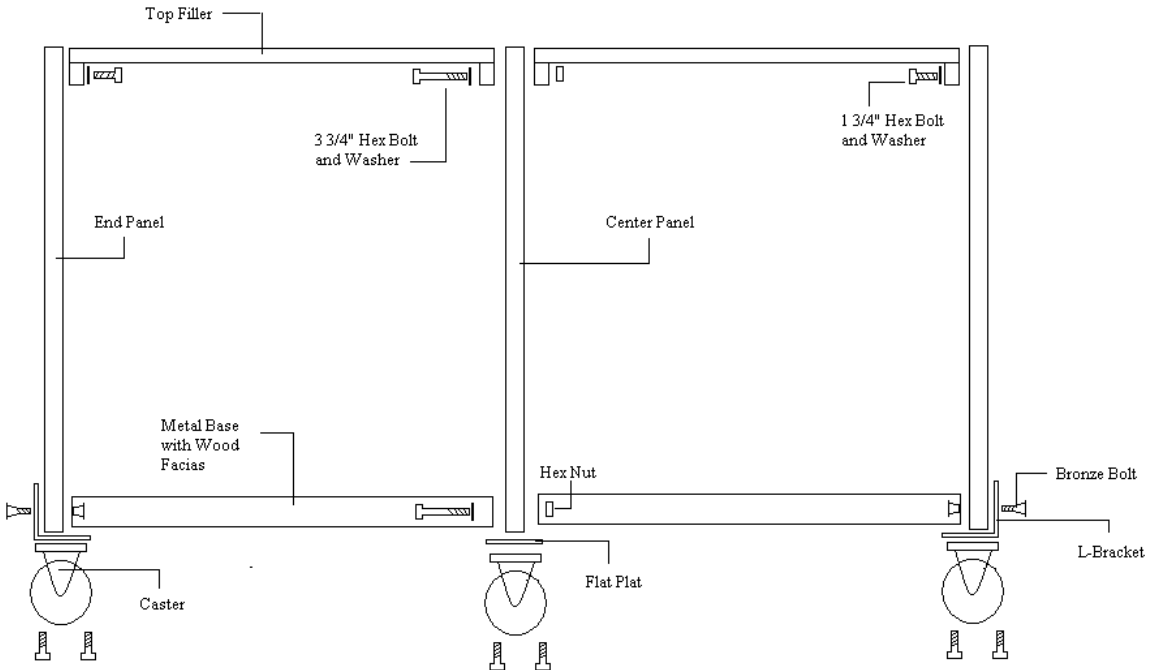

Corporate Office 574.233.8778 T
1607 South Main St 574.236.6050 F
South Bend IN 46613

Sales Office 847.729.8754 T
1333 Sanford Ct. 847.729.8753 F
Glenview IL 60025