
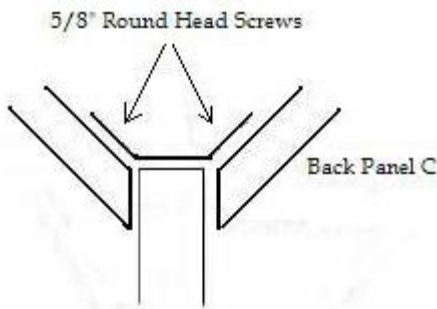


Paladin Caseworks
 1607 South Main Street
 South Bend IN 46613


OXFORD 6-Person Computer Carrel

- 1) Install levelers in threaded inserts in the bottom edge of each Panel B.
- 2) Attach metal channel to edge of Panel B using 1 1/2" round head screws in pre-bored holes.

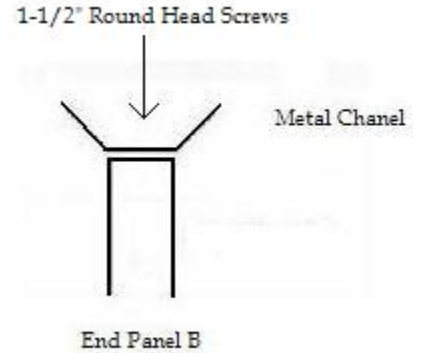

- 3.) Attach Back Panel C to legs of metal channel using 5/8" round head screws. Panel C should be even with the top edge of Panel B and the grommet hole should be located at the bottom.
- 4.) Attach work surface to the middle cleats using 1 1/2" flat head screws.

- 5.) Attach the lower shelf to the lower cleats using 1 1/4" flat head screws.
- 6.) Place the cap over the center of the completed assembly.

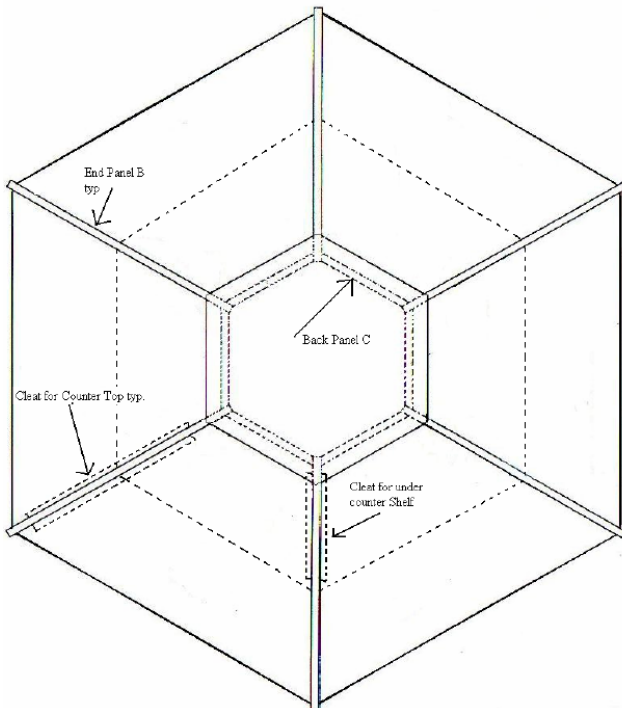

| Hardware | Quantity |
|-------------------------|----------|
| Metal channel | 6 |
| 1 1/2" round head screw | 30 |
| 5/8" round head screw | 60 |
| 1 1/2" flat head screw | 36 |
| 1 1/4" flat head screw | 24 |
| Leveler | 12 |